

## GPS operating instructions

**Follow instructions as below if you want to know the GPS of your own radio only.**

1, Open your radio's menu , Select Settings-->Setting--> GPS--> Choose "GPS on" , Then back to the main interface, You will find a GPS icon , GPS didn't work if you find a red small point right below the icon , But if the red point disappeared , It means GPS function is done .

2, To get the GPS information , You must sure you are now in open areas with the radio, Then Press Settings-->GPS Info , You can check the GPS information for your radio . ( Tips: If the first time you open GPS , You need to wait 5-10 minutes to GPS location )

**Follow instructions as below if you want to know the GPS of the others**

Get GPS info by pressing PTT key

1, Pls sure his radio or their radios GPS ON

2, His radio or their radios need to program in the software , After read ok, Select Zone setting---> Select one of the zone, For example "Zone1" ---> Select one of the digital Channels like "DigCH1"---> Send GPS--->

✓--->GPS---> choose any type from 1-16 , Then back to the main interface, In the right same frequency to the others , Press PTT key after your own radio was programmed OK in the step 3.

3, Your own radio need to program in the software also , After read ok, Select Zone setting---> Select one of the zone, For example "Zone1" ---> Select one of the digital Channels like "DigCH1"---> Receive GPS---> ✓  
--->GPS---> choose any type from 1-16 (Tips: You must sure you and the another radio have programmed in the same channel & zone & frequency & GPS type )

4, Open your own radio, You can check his or their GPS information by Pressing Settings--->RX GPS Info.

Get GPS info by programming in the software "GPS System"

1, Pls sure his radio or their radios GPS ON

2, His radio or their radios need to program in the software , After read ok , Press " GPS System "--->GPS---> choose any type from 1-16---> choose Ack zone---> Ack Channel---> Report Time ---> Dest ID , These choice is all up to you but need to corresponding to your own radio's set.

3, Your own radio need to program in the software also , After read ok, In the same channel---> Receive GPS---> ✓  
--->GPS---> choose any type from 1-16 (Tips: You must sure you and the another radio have programmed in the same zone & channel & frequency & GPS type )

4, Open your own radio, You can check his or their GPS information by Pressing Settings--->RX GPS Info.

## GPS 操作说明

如果只查看本机的GPS只需如下说明

1. 对讲机菜单里设置==》对讲机设置==》GPS设置==》选中“打开GPS”，在主界面会有个GPS图标，如果图标右边有个红点在，说明GPS还没定位，如果没有红点，说明本机的GPS已经定位。
2. 在空旷地方能收到GPS的条件下，在在菜单==》设置==》GPS信息里就可查看到本机的GPS信息。  
(第一次开启要有一段时间后才能定位)。

查看对方GPS信息如下说明(通过PTT GPS查看)

1. 对方的机器必须先GPS定位后。
2. 对方机器用写频软件配置，写频软件的数字信道模式下，☐ 发送GPS信息 ☐ 打勾此选项。
3. 本机器用写频软件配置，写频软件的数字信道模式下，☐ 接收GPS信息 ☐ 打勾此选项。

查看对方GPS信息如下说明(通过GPS系统查看(在写频软件里有的设置))

1. 对方的机器必须先GPS定位后。
2. 对方机器在GPS系统里可以设置定时发送GPS的时间，区域信道，目标ID。
3. 本机器用写频软件配置，本机信道要和对放机器GPS系统里定时发送的信道对应，把本机的对应信道的☐ 接收GPS信息 ☐ 打勾此选项。
4. 本机在菜单==》设置===》接收GPS 里就可查看到对方的GPS信息。