

APRS Voyager (firmware v1.03)

(manual revision 06 February 2017)

BUILT-IN 38.5 DBM / 7 WATT TRANSCEIVER
MIC-E/BASE-91/PLAIN TEXT POSITION REPORTING
BUILT-IN BLUETOOTH INTERFACE
SIMPLE ALIAS-BASED APRS PACKET DIGIPEATER
WEATHER STATION SUPPORT
EXTERNAL TELEMTRY MODULE SUPPORT
DIGITAL THERMOMETER SUPPORT
INPUT VOLTAGE MEASUREMENT
SERIAL CONSOLE FOR ADMINISTRATION
EASY USB-HID PROGRAMMING

Instruction manual
Configuration software manual



Designer: Mateusz Płociński SQ3PLX
Producer: Microsat
info@microsat.com.pl



Table of Contents

1. Technical parameters.....	3
2. Device features.....	4
2.1. Built-in 38.5 dbm / 7 watt transceiver.....	4
2.2. Mic-E/Base-91/Plain text position reporting.....	4
2.3. Built-in Bluetooth interface.....	4
2.4. Simple alias-based APRS packet digipeater.....	4
2.5. Weather station support.....	5
2.6. External telemetry module support.....	5
2.7. Digital thermometer support.....	5
3. Connectors and device status leds.....	6
3.1. Front panel.....	6
3.2. Rear panel.....	7
4. RS-485 / thermometer connector.....	8
4.1. RS-485 connection.....	8
4.2. Thermometer connector.....	8
5. Serial port connector.....	9
6. Connecting the weather station.....	10
6.1. LaCrosse/Technoline WS-2300, WS-2350 stations.....	10
6.2. Peet Bros Ultimeter stations.....	10
6.3. Davis Vantage stations.....	10
7. Connecting to PC.....	11
8. Description of configuration software.....	12
8.1. Reading configuration from the device.....	12
8.2. Writing configuration to the device.....	12
8.3. Firmware update.....	12
8.4. Configuration import/export.....	12
8.5. Radio Tab.....	13
8.6. Position reports Tab.....	14
8.7. Digipeater Tab.....	16
8.7.1 Digipeater / Common settings Tab.....	16
8.7.2 Digipeater / Simple aliases Tab.....	17
8.8. Beacons Tab.....	18
8.9. Telemetry reports Tab.....	19
8.9.1. Telemetry reports / Report settings.....	20
8.9.2. Telemetry reports / Analog channels.....	21
8.9.3. Telemetry reports / Digital channels.....	22
8.9.4. Telemetry reports / WXBits outputs.....	22
8.10. Weather reports Tab.....	23
8.11. External interfaces Tab.....	24
8.11.1. External interfaces / Serial ports.....	24
8.11.2. External interfaces / Bluetooth.....	25
8.11.3. External interfaces / RS-485 port.....	26
8.11.4. External interfaces / Weather station.....	27
8.11.5. External interfaces / Serial console.....	27
8.11.6. External interfaces / GPS receiver.....	28
8.11.7. External interfaces / KISS.....	29
8.12. Test tone.....	30
9. Bluetooth connection with APRSDroid.....	31

1. Technical parameters

Mechanical:	
Dimensions (without connectors)	100x69x28 mm
Weight	150 g
Housing material	Aluminium
Connectors / interfaces:	
RF connector	SMA female
Power connector	Round 5.5/2.1mm (with plus at center)
Telemetry / thermometer connector	Terminal with screws (shared)
Serial port connector	Mini DIN 6-pin female (1 serial port)
Bluetooth module	HC-05 module, Bluetooth v2.0, Class 2 with integrated antenna
Environment:	
Operation temperature	-20 °C / +50 °C
Humidity	95% max.
Electrical:	
Supply voltage	12-14 VDC typ. (14.4 VDC max.)
Power consumption (at 13VDC/5W)	80 mA (RX), 1150 mA (TX)
Power consumption (at 13VDC/7W)	80 mA (RX), 1380 mA (TX)
RF transmitter / receiver	
Antenna impedance	50 Ohm
Frequency range	144 - 146 MHz (wider range not tested)
Output power	37 dbm / 5 watt
Output filter	5-pole LPF
Maximum transmit time	20 seconds within 60 seconds window (33% duty cycle)
Squelch (level 1) sensitivity (*)	-112 dBm (squelch opens), -114 dBm (squelch closes)
Proper packet decoding signal level (*)	(available soon, needs to be exactly tested)
* tests were made using HP8656B signal generator with packets injected via external modulation input at 2.5 kHz FM modulation.	

2. Device features

2.1. Built-in 38.5 dbm / 7 watt transceiver

APRS Voyager incorporates a built-in 38.5dbm / 7 watt transceiver capable of transmitting and receiving APRS packets. The only thing you need to do is to connect a proper antenna to SMA connector. Output power is programable between 5 watt and 7 watt.

2.2. Mic-E/Base-91/Plain text position reporting

The main feature for an APRS tracker is position reporting. APRS Voyager allows you to select between three most common position reporting formats:

- Mic-E - uses both AX.25 destination address and information field for position report and is the most compact reporting method, giving the shortest packet length,
- Base-91 - second compressed method oriented to short report packet length,
- Plain text - in this method station position report is sent in human-readable plain text format,

You can also select between fixed time interval reporting which means that packets are sent every X number of seconds, and SmartBeaconing. SmartBeaconing is an algorithm which sends position reports with intervals dependent on speed and course, allowing for more accurate reporting especially in urban area. SmartBeaconing algorithm was first developed by Tony Arnerich KD7TA and Steve Bragg KA9MVA and now it is widely used by most APRS tracker devices.

2.3. Built-in Bluetooth interface

APRS Voyager integrates a built-in Bluetooth interface which can work in one of selectable modes:

- Serial console - similar to RS-232 serial console known from PLXTracker or PLXDigi, it outputs debugging information for device operation.
- KISS - allows to exchange packets with your laptop, tablet or smartphone with APRS software installed. This feature works great with APRSDroid available for Android phones and allows to plot received stations on a map. APRSDroid allows also to send and receive messages, beacons and SmartBeaconing position via APRS Voyager.
- GPS passthrough - if you have a GPS receiver connected to APRS Voyager RS-232 serial port, then you can forward NMEA stream to any other device using Bluetooth interface.

2.4. Simple alias-based APRS packet digipeater

With APRS Voyager you can do a simple alias-based APRS packet digipeating. Generally APRS tracker units should not be used as a full-featured digipeaters but with alias-based digipeater feature you can digipeat WIDE1-1 packets sent by other mobiles increasing their chance of reaching an I-Gate.

2.5. Weather station support

APRS Voyager allows you to receive weather data from compatible weather stations over RS-232 serial interface. Currently supported stations are:

- LaCrosse/Technoline WS-2300,
- LaCrosse/Technoline WS-2350,
- Peet Bros Ultimeter 100,
- Peet Bros Ultimeter 800,
- Peet Bros Ultimeter 2000,
- Peet Bros Ultimeter 2100,
- Davis Vantage Pro (with RS-232 datalogger),
- Davis Vantage Pro2 (with RS-232 datalogger),
- Davis Vantage Pro Plus (with RS-232 datalogger),
- Davis Vantage Pro2 Plus (with RS-232 datalogger),

2.6. External telemetry module support

You can use an additional telemetry module for reporting of voltages and electric current values of your installation. This is especially useful for monitoring of solar panel powered systems on remote sites. WXTelemetry module allows you to read 2 voltages, 2 currents and one temperature, then sends these values as APRS telemetry reports to RF.


2.7. Digital thermometer support

If you do not need a telemetry module connected to RS-485 serial bus, then you can use it for direct connection of DS18B20 or DS18S20 thermometer input. Measured temperature can then be sent in beacon text or telemetry reports.

3. Connectors and device status leds

3.1. Front panel

There are 3 leds on the front panel that show the status of device operation. The following image shows the location of front panel LEDs and connectors.

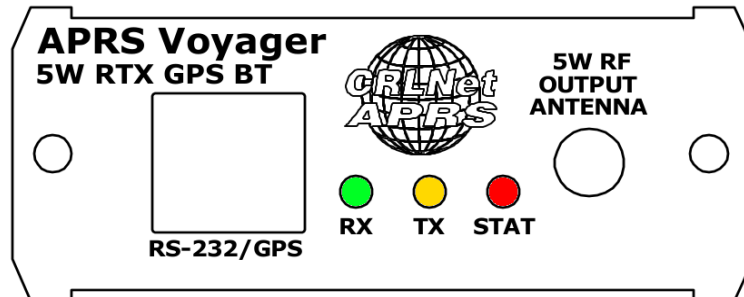

Leds:

- **Green LED** - illuminates when receiving a signal from RF (indicates the channel is busy),
- **Yellow LED** - lights during transmission, when the device sends an APRS data packet,
- **Red LED** - blinking is dependent on current device state:
 - one short blink (0.1 second) per 1.6 seconds - no GPS NMEA sentence received within last second, GPS disconnected,
 - two short blinks (0.1 second each) per 1.6 seconds - GPS NMEA sentence received but no position fix,
 - three short blinks (0.1 second each) per 1.6 seconds - GPS NMEA sentence received with position fix,
 - one long blink (1 second) per 1.6 seconds - APRS packet was properly received.

Connectors:

- **SMA female** - 50 Ohm RF antenna connector,
- **Mini DIN 6-pin** - one RS-232 serial data interface,


Please never power-up the device (via 12V rear panel power input) without proper antenna connected! RF transistors of every kind of transmitters are sensitive for proper antenna match and can get damaged when working in unmatched conditions!

APRS Voyager incorporates only one RS-232 serial interface (contrary to PLXTracker or PLXDigi), located on „RS-232 port 2” pins (port 1 is internally occupied by Bluetooth interface).

If you wish to use a weather station, serial console, etc., you will need a different set of serial cables than for PLXTracker or PLXDigi.

3.2. Rear panel

On rear panel of the device there is a shared RS-485 / thermometer connector and a round power 5.5/2.1mm connector.

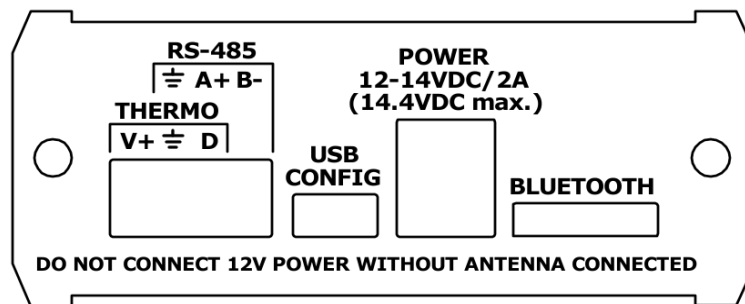

Connectors:

- **4-pin terminal with screws** - as shown on the image, you can connect a RS-485 bus using A+ and B- connectors, or DS18B20-type digital thermometer using V+, GND and DATA connectors (V+ is a weak 5V output for thermometer powering),
- **mini USB** - a mini USB socket, used to connect to a computer for configuration,
- **round 5.5/2.1mm power connector** - main power input of the device with allowed input voltage of around 12V to 14V (with plus at center). A source with current capacity of at least 2A should be used.

Other:

- **Bluetooth antenna** - installed outside aluminium case for proper operation. Be careful not to damage the antenna.

4-pin terminal with screws is shared between RS-485 and digital thermometer. Both options cannot be used at the same time.

Please do not cross the maximum allowed continuous input voltage of 14.4V. RF amplifier module is specified below 14.4V and may be damaged when powered with higher voltage.

Device is specified to work correctly when powered with 12V car battery in car system with properly working alternator.

4. RS-485 / thermometer connector

Rear panel RS-485 / thermometer connector options are simple. You can connect RS-485 extension modules via RS-485 bus or digital thermometer, but not both at the same time.


4.1. RS-485 connection

For RS-485 connection please connect RS-485 A+ of APRS Voyager to RS-485 A+ of the module and RS-485 B- of APRS Voyager to RS-485 B- of the module. Both APRS Voyager and telemetry module must share the same ground potential (should be powered from the same power source or at least share the ground wire).

4.2. Thermometer connector


You can connect a DS18B20 or DS18S20 thermometer directly to APRS Voyager rear panel.

- DS18B20 Vdd goes to APRS Voyager V+ pin,
- DS18B20 GND goes to APRS Voyager ground pin,
- DS18B20 DQ goes to APRS Voyager D pin.

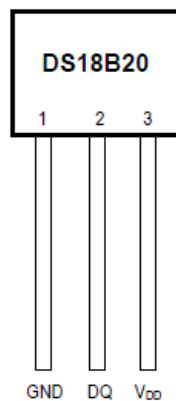

5. Serial port connector

In APRS Voyager the MINI DIN 6pin female connector is used for single RS-232 serial port and 5V voltage output.

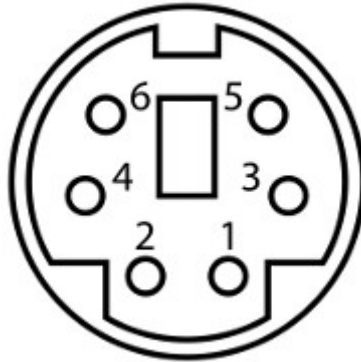

MINI DIN 6pin connector pins description:

- Pin 6 - not used
- Pin 4 - RS-232 Port 2 TXD,
- Pin 2 - GND,
- Pin 1 - 5V output, do not short-circuit, max. current 100mA,
- Pin 3 - hard-wired to negative voltage for WS-2300/WS-2350 weather station support,
- Pin 5 - RS-232 Port 2 RXD.

RS-232 Port 2 functions are selectable in software.

APRS Voyager incorporates only one RS-232 serial interface (contrary to PLXTracker or PLXDigi), located on „RS-232 port 2” pins (port 1 is internally occupied by Bluetooth interface).

If you wish to use a weather station, serial console, etc., you will need a different set of serial cables than for PLXTracker or PLXDigi.

6. Connecting the weather station

6.1. LaCrosse/Technoline WS-2300, WS-2350 stations

The only difference between WS-2300 and WS-2350 weather stations is that manufacturer has made an external USB to RS232 adapter, which is not used in case of APRS Voyager.

WS-23XX weather stations require a bit exotic connection method. There is no GND connection and both positive and negative 5V voltages are necessary for interfacing.

To connect WS-2300 or WS-2350 station to APRS Voyager you will need to use:

- "CAB02B - PLXTracker Blue/TRX1W/APRS Voyager serial interface cable (for WS-23XX)"

Schematic for this cable is available on our webpage.

6.2. Peet Bros Ultimeter stations

Peet Bros Ultimeter weather stations use a standard RS-232 serial port interface with TXD, RXD and GND. Other serial lines are not used. Stations must then be manually switched to "data logger" mode. According to the manufacturer's instructions, you should press CLEAR + WIND SPEED buttons for 3 seconds to activate the "data logger".

To connect Peet Bros Ultimeter station to APRS Voyager you will need to use:

- "CAB29B - PLXTracker Blue/TRX1W/APRS Voyager serial interface cable (for Davis, PeetBros)"

Schematic for this cable is available on our webpage.

6.3. Davis Vantage stations

Davis Vantage weather stations use a standard RS-232 serial port interface with TXD, RXD and GND. Fourth wire is connected to DCD, DTR, and DSR inside original DB-9 connector but it shouldn't be used on APRS Voyager side.

To connect APRS Voyager to Davis weather stations you need to use an additional RS-232 "datalogger" interface available from the manufacturer. Device part number is 06510SER.

Davis stations datalogger interface comes in two kinds: "standard" datalogger or "APRS" datalogger. According to my current knowledge, both types work fine with APRS Voyager (it doesn't use an "APRS" feature of datalogger but "APRS" datalogger has also the same communication options like "standard" one).

To connect Davis Vantage station to APRS Voyager you will need to use:

- "CAB29B - PLXTracker Blue/TRX1W/APRS Voyager serial interface cable (for Davis, PeetBros)"

Schematic for this cable is available on our webpage.

7. Connecting to PC

Configuration of APRS Voyager can be done via USB interface with APRS Voyager Configurator software.

APRS Voyager enters into configuration mode only when USB cable is detected while powering up and it is indicated by Red LED blinking.

To connect to your computer, follow these steps:

- Disconnect APRS Voyager DB-9 cable, device should be unpowered,
- Connect the USB cable from your computer to APRS Voyager, Red LED should start to blink (device is now powered from USB),
- Now you can use APRS Voyager Configurator for device configuration read/write or firmware update.

APRS Voyager device appears as USB-HID device in Windows operating system, and should be detected automatically. Therefore you don't need to install any device drivers for APRS Voyager.

8. Description of configuration software

In this chapter we will discuss all the Configurator application settings and describe its influence on the device operation.

8.1. Reading configuration from the device

To read the configuration from the device you must use the **“Read config”** button. After this action, the program will download current configuration values from APRS Voyager internal memory.

8.2. Writing configuration to the device

After entering configuration values in Configurator application, choose **“Write config”** to upload current configuration to APRS Voyager internal memory.

8.3. Firmware update

If you download a new APRS Voyager Configurator application version, you should also update device firmware to be compatible with current Configurator version.

To update firmware of the device, please click on the **“Upload firmware”** button.

Don't worry, it is not possible to “brick” or damage the device with this operation. If anything goes bad, you will simply need to try again with firmware update function.

Please remember that you should update your device with the same Configurator and firmware version numbers. It is also always necessary to upload new configuration after flashing the device with new firmware versions. The device will not start if configuration and firmware versions do not match. If your device simply blinks all the leds when powered up, it means that your configuration version does not match firmware version.

8.4. Configuration import/export

With **“Save to file”** button you can export your current configuration from APRS Voyager Configurator window to a file on your PC's disk drive. Similarly with **“Read from file”** button you can import configuration from a file to your APRS Voyager Configurator application. These functions can be used to save your device's configuration and to transfer your device's configuration to recent Configurator and firmware versions.

8.5. Radio Tab

APRS Voyager Configurator v1.03

Connection:

Configuration import/export:

MICROSAT CRLNet APRS

Radio | Position reports | Digipeater | Beacons | Telemetry reports | Weather reports | External interfaces | Test tone

Callsign: TX delay [ms]: TX/RX frequency [Hz]:

Latitude: Quiet time [ms]: TX power:

Longitude: Randomize quiet time:

Squelch level:

Channel busy detect:

Consecutive packets send:

- **“Callsign”** - the callsign of your station with SSID extension. This field can be up to 6 characters long. The default SSID is 0 and allowed SSID's are between 0 and 15,
- **“Latitude”** - north-south static position of your radio station (not used if you are going to use GPS position),
- **“Longitude”** - east-west static position of your radio station (not used if you are going to use GPS position).

For APRS beacons latitude is encoded as “XXYY.ZZD” where XX are degrees, YY are seconds (1/60 of a degree), ZZ are hundredths of seconds (1/100), D can be N for north or S for south.

Longitude is encoded as “XXXYY.ZZD” where XXX are degrees, YY are seconds (1/60 of a degree), ZZ are hundredths of seconds (1/100), D can be E for east or W for west.

You can easily find your coordinates in APRS format on aprs.fi map, they are displayed in upper-left corner of the screen.

- **“TX delay (ms)”** - delay time in milliseconds for sending an APRS packet. It is the length of preamble sent before packet and necessary for radio receivers to synchronize with our packet. The recommended value is not less than 250ms,
- **“Quiet time (ms)”** - minimum time off after the radio channel is busy. After this time next packet can be sent from the transmit buffer,
- **“Randomize quiet time”** - this option adds some randomization to Quiet time value which changes every packet sent with a range selected in this box,
- **“Squelch level”** - this a squelch level selection, with lower values usable signal will be detected with lower signal amplitude. Default value of 1 should be the best option,

- **“Channel busy detect”** - this option selects if channel busy is detected by input signal amplitude (**“analog signal level”**) or with proper packet start detection (**“digital detect”**). The second option allows to work with open-squelch on the radio, but it can lead to some packet collisions. The first option is default and should be used in most cases,
- **“Consecutive packet send”** - this option will make your device send all the packets from TX queue one after another without any delays (**“in bursts”**), or with TX delay, Quiet time, and channel busy detection between every packet (**“separately”**). The first one is default and used by most APRS devices,
- **„TX/RX frequency [Hz]”** - device operating frequency for both TX and RX. Checked frequencies range from 144 to 146 MHz.

8.6. Position reports Tab

The screenshot shows the APRS Voyager Configurator v1.03 window. The 'Position reports' tab is selected. The interface includes a top menu bar with options like Radio, Position reports, Digipeater, Beacons, Telemetry reports, Weather reports, External interfaces, and Test tone. The main area is divided into several sections:

- Connection:** Buttons for Read config, Write config, and Upload firmware.
- Configuration import/export:** Buttons for Save to file and Read from file.
- Position report mode:** A dropdown menu set to 'SmartBeaconing'.
- Position encoding protocol:** A dropdown menu set to 'Mic-E'.
- SmartBeaconing settings:**
 - Min Turn Angle [deg]: 27
 - Turn Slope: 410
 - Min Turn Time [s]: 5
 - Slow Speed [km/h]: 8
 - Slow Period [s]: 1800
 - Fast Speed [km/h]: 95
 - Fast Period [s]: 90
- Report encoding settings:**
 - Symbol code: > Symbol table: / Mic-E message: Off Duty
 - Path: WIDE1 -1, WIDE2 -1, -
 - Status text: (empty field)
 - Time: Day, hour, min Course/Speed: Yes
 - Send last position if fix lost: Yes Altitude: Yes
 - Send interval on fix lost (s): 600
- Fixed time interval:** Position report interval [s]: 60

- **“Position report mode”** - selects position report mode,
 - **“SmartBeaconing”** - algorithm which sends position reports with intervals dependent on speed and course, allowing for more accurate reporting especially in urban area,
 - **“Fixed time interval”** - packets are sent every with a fixed time interval,
- **“SmartBeaconing”** is an algorithm invented by Tony Arnerich KD7TA and Steve Bragg KA9MVA,
 - **“Min Turn Angle [deg]”** - this is a minimum heading change which causes an immediate position report packet send,
 - **“Turn Slope”** - this value is a coefficient used to modify heading change necessary for immediate position report packet send.

These two values are used in the following formula: $\text{turn_threshold} = \text{min_turn_angle} + \text{turn_slope}/\text{speed}$. Default value for min_turn_angle is 27 degrees, turn slope is 410. So

if your speed is 10 km/h, packet will be sent immediately if $\text{turn_threshold} = 27 + 410/10 = 68$ degrees. If your speed is 80 km/h, packet will be sent immediately if $\text{turn_threshold} = 27 + 410/80 = 32$ degrees. Now we see that packets will be sent with lower heading changes for fast speed and with higher heading changes for low speeds. This is called “corner pegging”.


- **“Min Turn time [s]”** - this value limits a minimal time between two position packets sent even if above turn_threshold formula is met,
- **“Slow Speed [km/h]”** - if speed is below that value, packets are sent with interval of “Slow Period [s]”, corner pegging algorithm is turned off,
- **“Slow Period [s]”** - time between position packets when speed is below “Slow Speed [km/h],
- **“Fast Speed [km/h]”** - if speed is above that value, packets are sent with interval of “Fast Period [s]”, but corner pegging algorithm is tuned on too,
- **“Fast Period [s]”** - time between position packets when speed is below “Fast Speed [km/h],
- **“Fixed time interval”**,
 - **“Position report interval [s]”** - time between packets in “Fixed time interval” report mode,
- **“Position encoding protocol”** - this option defines a format of APRS position report packets,
 - **“Mic-E”** - uses both AX.25 destination address and information field for position report and is the most compact reporting method, giving the shortest packet length,
 - **“Base-91”** - second method oriented to shortest report packet length,
 - **“Plain text”** - in this method station position report is sent in human-readable plain text format,
- **“Report encoding settings”**,
 - **“Symbol code”** - APRS packet symbol code,
 - **“Symbol table”** - APRS packet symbol table,
 - **“Mic-E message”** - you can select one of predefined Mic-E messages,
 - **“Path”** - there you can define up to 3 APRS position packet path components,
 - **“Status text”** - this is a status text attached at the end of position packet,
 - **“Time”** - selects position report time format,
 - **“Send last position if fix lost”** - if enabled, device will send last known position in fixed intervals on GPS fix lost,
 - **“Send interval on fix lost (s)”** - fixed interval for packets sent on GPS fix lost if enabled,
 - **“Course/Speed”** - enables or disables course/speed reports,
 - **“Altitude”** - enables or disables altitude reports.

If you are new to APRS or if you are running the device for the first time, you can leave all the options as default. By default, the device will send SmartBeaconing packets in Mic-E format with frequency dependent on your moving speed and course (if GPS is connected and valid position fix is being received).

8.7. Digipeater Tab

Digipeater Tab contains several options for simple alias-based digipeater feature of APRS Voyager.

8.7.1 Digipeater / Common settings Tab

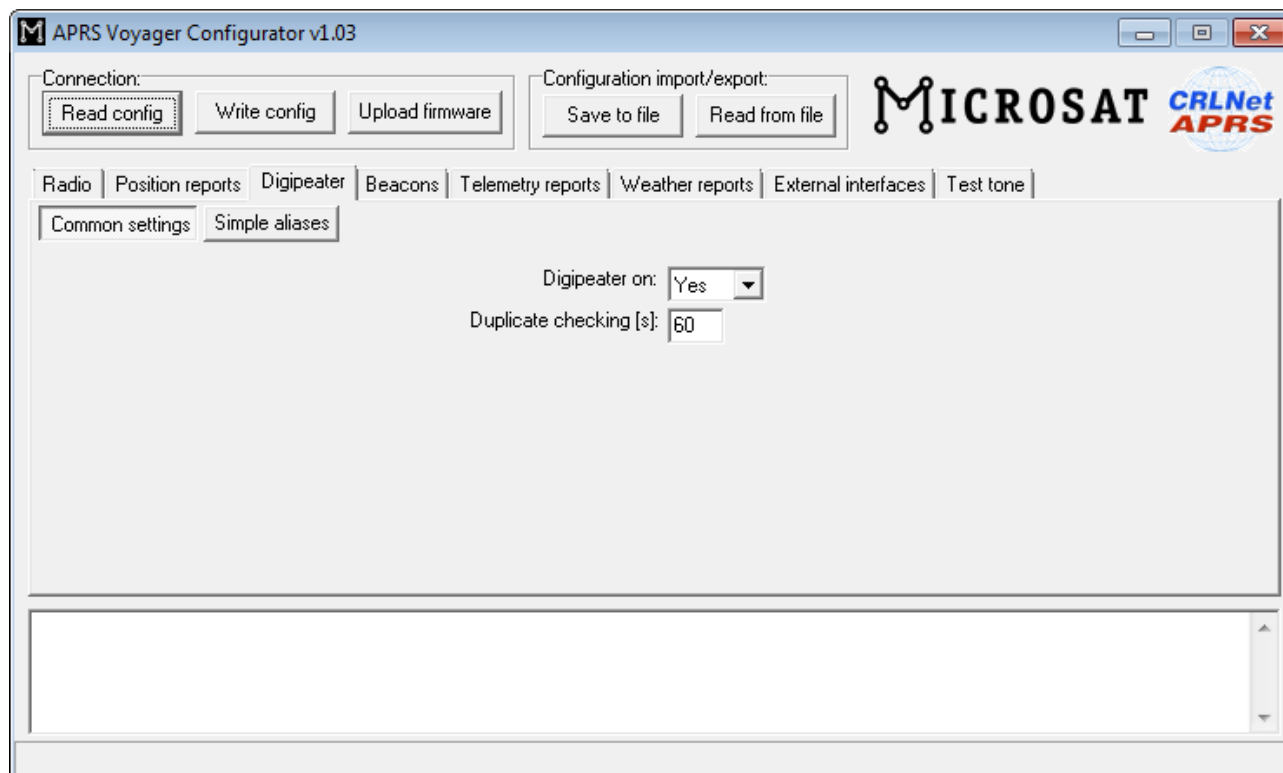

- **“Digipeater on”** - Enables or disables a function of RF APRS packets digipeating,
- **“Duplicate checking (s)”** - Time in seconds after which the next packet will be forwarded, if it has the same content as the previous one. This function allows you to ignore stations, which are flooding the network and also to ignore packets which were heard a while before and are heard again after being digipeated by other stations.

8.7.2 Digipeater / Simple aliases Tab

The screenshot shows the 'APRS Voyager Configurator v1.03' window. At the top, there are buttons for 'Read config', 'Write config', and 'Upload firmware' under the 'Connection' section, and 'Save to file' and 'Read from file' under the 'Configuration import/export' section. The 'MICROSAT CRLNet APRS' logo is in the top right. Below these are tabs for 'Radio', 'Position reports', 'Digipeater', 'Beacons', 'Telemetry reports', 'Weather reports', 'External interfaces', and 'Test tone'. The 'Digipeater' tab is selected, and within it, the 'Simple aliases' sub-tab is active. This sub-tab contains two identical tables for configuring aliases. The first table has the following data:

Alias:	Ssid:	Traceable:	Enable if:
WIDE1	-1	Yes	Always
		No	Never
		No	Never
		No	Never

The second table is empty. Below the tables is a large empty text area.

- “Alias”, “SSID” - if packet path contains this string and SSID, it will be digipeated,
- “Traceable” - if Yes, APRS Voyager will add its own callsign to the path, if No, it will not do that,
- “Enable if” - Disables (Never) or enables (always) current row of digipeater settings.

8.8. Beacons Tab

This Tab contains settings related to device beacon packets. If you are going to use GPS position reports configured in Position reports Tab, then you can leave this Tab unchanged.

- **“Dest”** - destination field of a beacon packet. It would be the best to leave it default which will allow your device to be recognized as APRS Voyager (and added to working stations callsign list on my webpage),
- **“Path 1”, „Path 2”** - APRS path, if you leave these fields empty, beacon will be sent without path,
- **“RF[min]”** - beacon transmit rate to RF (expressed in minutes), beacon will not be sent if this field is set to 0,
- **„Enable if”** - beacon can be disabled (Never), enabled (Always), enabled only if device is receiving a valid position fix from GPS (GPS fixed), or enabled only if device is not receiving a valid position fix from GPS (GPS not fixed).
- **“Message”** - APRS packet information field content. Beacon will not be sent if this field is left empty.

To properly generate a message field structure, please read the information on the APRS packet format.

Example beacon packet:

```
/<gpsdate>z<gpslat>/<gpslong>>PLXTracker U=<volt>V.
```

- **/** - APRS data ID,
- **<gpsdate>z** - GPS time and date in the format DDHHMM (day/hour/minute),
- **<gpslat>/<gpslong>** - station latitude and longitude obtained from GPS,

- „/” - together with “>” sign between <gpslat> and <gpslong> defines a station symbol (House in this example), please refer to the table of symbols at <http://aprs.pl/ikony.htm>,
- PLXTracker U=<volt>V - beacon information field, <volt> will be replaced with input voltage reading.

As you can see in the above example, APRS Voyager allows to use some special strings, which are automatically replaced with corresponding values:

- <statlat> - inserts latitude defined on "Radio" Tab.
- <statlong> - inserts longitude defined on "Radio" Tab.
- <gpsdate> - inserts time received from GPS in format: DDHHMM.
- <gpslat> - inserts latitude received from GPS.
- <gpslong> - inserts longitude received from GPS.
- <volt> - inserts measured input voltage,
- <temp> - inserts temperature from thermometer connected to RS-485 bus (Celsius),
- <tempf> - inserts temperature from thermometer connected to RS-485 bus (Fahrenheit),

After inserting corresponding values example beacon packet will look for example like that:

```
/100214z5221.60N/01653.63E>PLXTracker U=12.1V
```

Important note: Sometimes I see that users try to replace special <gpsdate>, <gpslat>, <gpslong>, <volt> strings with direct values. You don't need to do that. If you set for example “<gpsdate>” string in your beacon, current date will be placed instead of this string. The same for “<gpslat>”, “<gpslong>”, “<volt>”, etc.

If you are new to APRS or if you are running the device for the first time, you can leave all the options as default. By default, the device will send standard beacon packet with time, latitude, longitude and current voltage reading to RF every 30 minutes (if GPS is connected and valid position fix is being received).

8.9. Telemetry reports Tab

This Tab contains all settings related to telemetry reports feature present in APRS protocol. Telemetry reports allow to send various data to APRS, which then can be plotted on graphs by WWW services connected to APRS/APRS-IS network (like well-known aprs.fi service).

You can find more useful information about telemetry reports format in APRS specification: <http://aprs.org/doc/APRS101.PDF>, page 68.

8.9.1. Telemetry reports / Report settings

APRS Voyager Configurator v1.03

Connection:

Configuration import/export:

MICROSAT CRLNet APRS

Radio | Position reports | Digipeater | Beacons | Telemetry reports | Weather reports | External interfaces | Test tone

Report settings | Analog channels | Digital channels 1-4 | Digital channels 5-8 | WXBits outputs

Telemetry parameters: Dest: APMIQA - 0 Path: WIDE1 - 1 Path: WIDE2 - 1 RF[min]: 30

Telemetry data: Dest: APMIQA - 0 Path: WIDE1 - 1 Path: WIDE2 - 1 RF[min]: 30

Telemetry project title: Telemetry test

First telemetry data packet delay [min]: 60

Telemetry reports: Disabled

Please refer to APRS protocol reference v1.0.1, chapter 13, for more info about telemetry reports, messages, and protocol limitations ("aprs protocol reference" in google).

- **“Telemetry parameters”** - this group of fields defines settings of PARM, UNIT, EQNS, and BITS parameter packets which describe the telemetry data sent by the device,
 - **“Dest”** - destination field of a telemetry parameters packet.
 - **“Path”** - APRS path (default value of WIDE2-2 will allow your device to be digipeated by most nearby digipeaters), if you leave this field empty, packet will be sent without path,
 - **“RF[min]”** - telemetry parameters packet transmit rate to RF (expressed in minutes), packet will not be sent if this field is set to 0,
 - **“IS[min]”** - telemetry parameters packet transmit rate to APRS-IS (expressed in minutes), packet will not be sent if this field is set to 0,
- **“Telemetry data”** - this group of fields defines settings telemetry data reports,
 - **“Dest”** - destination field of a telemetry data packet.
 - **“Path”** - APRS path (default value of WIDE2-2 will allow your device to be digipeated by most nearby digipeaters), if you leave this field empty, packet will be sent without path,
 - **“RF[min]”** - telemetry data packet transmit rate to RF (expressed in minutes), packet will not be sent if this field is set to 0,
 - **“IS[min]”** - telemetry data packet transmit rate to APRS-IS (expressed in minutes), packet will not be sent if this field is set to 0,
- **“Telemetry project title”** - this is a project name associated with the telemetry station, sent in BITS message,
- **“First telemetry data packet delay [min]”** - delay for the first telemetry data packet, it allows to gather data (especially for 10-min and 60-min report) after device power-up.
- **“Telemetry reports”** - if disabled, no telemetry parameters or telemetry data

messages will be sent,

8.9.2. Telemetry reports / Analog channels

This Tab defines 5 analog channels available in APRS telemetry reports. You can select many different sources for channels data, including external WXTelemetry module data (M), other external devices data (E) and device internal data (I).

APRS Voyager Configurator v1.03

Connection:

Configuration import/export:

MICROSAT CRLNet APRS

Radio | Position reports | Digipeater | Beacons | Telemetry reports | Weather reports | External interfaces | Test tone

Report settings | Analog channels | Digital channels 1-4 | Digital channels 5-8 | WXBits outputs

	Name:	Units:	Source:	Coeff A:	Coeff B:	Coeff C:	1 min average:	
Analog 1:	Vin	Volt	(I) Input voltage	0	0.075	0	Off	Default parameters
Analog 2:	A2	None	Not used	0	0	0	Off	Default parameters
Analog 3:	A3	None	Not used	0	0	0	Off	Default parameters
Analog 4:	A4	None	Not used	0	0	0	Off	Default parameters
Analog 5:	A5	None	Not used	0	0	0	Off	Default parameters

Note: types of telemetry sources are: (M) - from WXTelemetry, (E) - from external devices, (I) - device internal sources.

- **“Name”** - short name for the channel, length is limited by APRS standard and is different for different channel numbers,
- **“Units”** - short name for units of data for the channel, length is limited by APRS standard and is different for different channel numbers,
- **“Source”** - most important field, specifies what data will be send for particular channel, (M) sources are associated with WXTelemetry module and (I) sources are associated with device's internal statistics and measurements,
- **“Coeff A”, “Coeff B”, “Coeff C”** - these coefficients tell recipients of the telemetry reports how to decode analog value in following form:
$$\text{value} = A * \text{data} * \text{data} + B * \text{data} + C,$$
- **“1 min average”** - only functional for external telemetry module data (M), defines if reported values are averaged or not,
- **“Default parameters”** - you should click this button after you change data source for the channel. It loads default coefficient values and name/units for a channel.

Important note: If you change “Source” field for a channel, you also need to change “Name”, “Units”, and “Coeffs” fields. Otherwise everyone else who receive your data (including web services like aprs.fi) will not be able do decode your reports properly. Every source has its own coefficients, names and units. With USB Configurator you can get default settings by clicking on “Default parameters” button. When changing configuration via WWW you need to set these fields manually (you can always write

them down from USB Configurator application).

8.9.3. Telemetry reports / Digital channels


This Tab defines 8 digital channels available in APRS telemetry reports. These tabs should be used when WXBits module is connected.

- **“Name”** - short name for the channel, length is limited by APRS standard and is different for different channel numbers,
- **“Label”** - short label for the channel, length is limited by APRS standard and is different for different channel numbers,
- **“Source”** - most important field, specifies what data will be send for particular channel, (M) sources are associated with WXBits module,
- **“Inverted”** - defines if channels should be reported as inverted in BITS telemetry message,
- **“Default parameters”** - you should click this button after you change data source for the channel. It loads default coefficient values and name/units for a channel.

Important note: If you change “Source” field for a channel, you also need to change “Name”, “Label”, and “Inverted” fields. Otherwise everyone else who receive your data (including web services like aprs.fi) will not be able do decode your reports properly.


8.9.4. Telemetry reports / WXBits outputs

This Tab defines what should be the default states for WXBits output channels. After power-up APRS Voyager will constantly try to set outputs to the defined states, unless changed by the user.

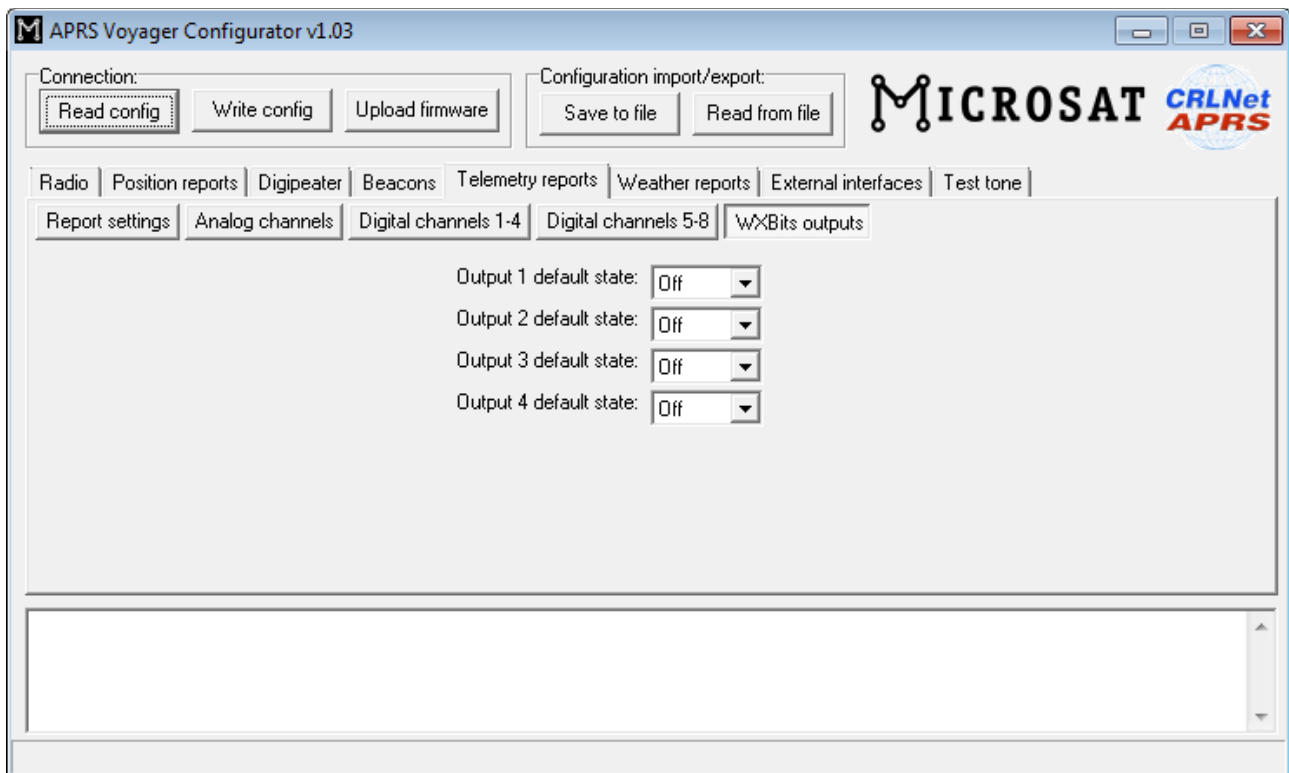

8.10. Weather reports Tab

This Tab contains all settings related to weather station reports. If you are not going to use weather station, you can leave it unchanged.

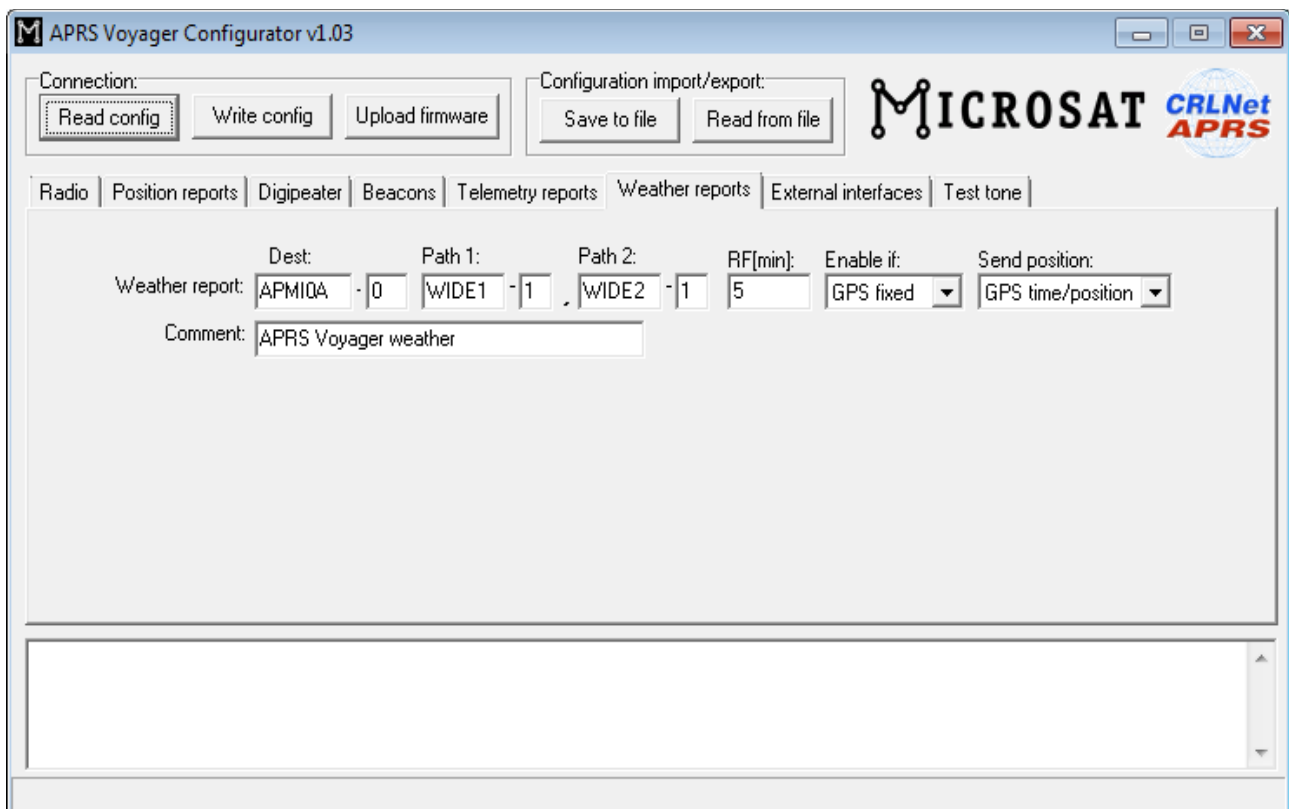


- **“Dest”** - destination field of a weather report packet.
- **“Path1”, “Path 2”** - up to 2 components of APRS path, if you leave this field empty, packet will be sent without path,
- **“RF[min]”** - packet transmit rate to RF (expressed in minutes), packet will not be sent if this field is set to 0,
- **“Enable if”** - beacon enable condition:
 - **“Never”** - beacon disabled,
 - **“Always”** - beacon enabled,
 - **“GPS fixed”** - beacon enabled if GPS fixed,
- **“Send position”** - selects between dynamic position from GPS and static position from “Latitude”, “Longitude” fields in “Radio” Tab,
- **“Comment”** - weather report comment.

8.11. External interfaces Tab

This Tab is related to settings of all external devices and interfaces which may be connected to APRS Voyager.

8.11.1. External interfaces / Serial ports

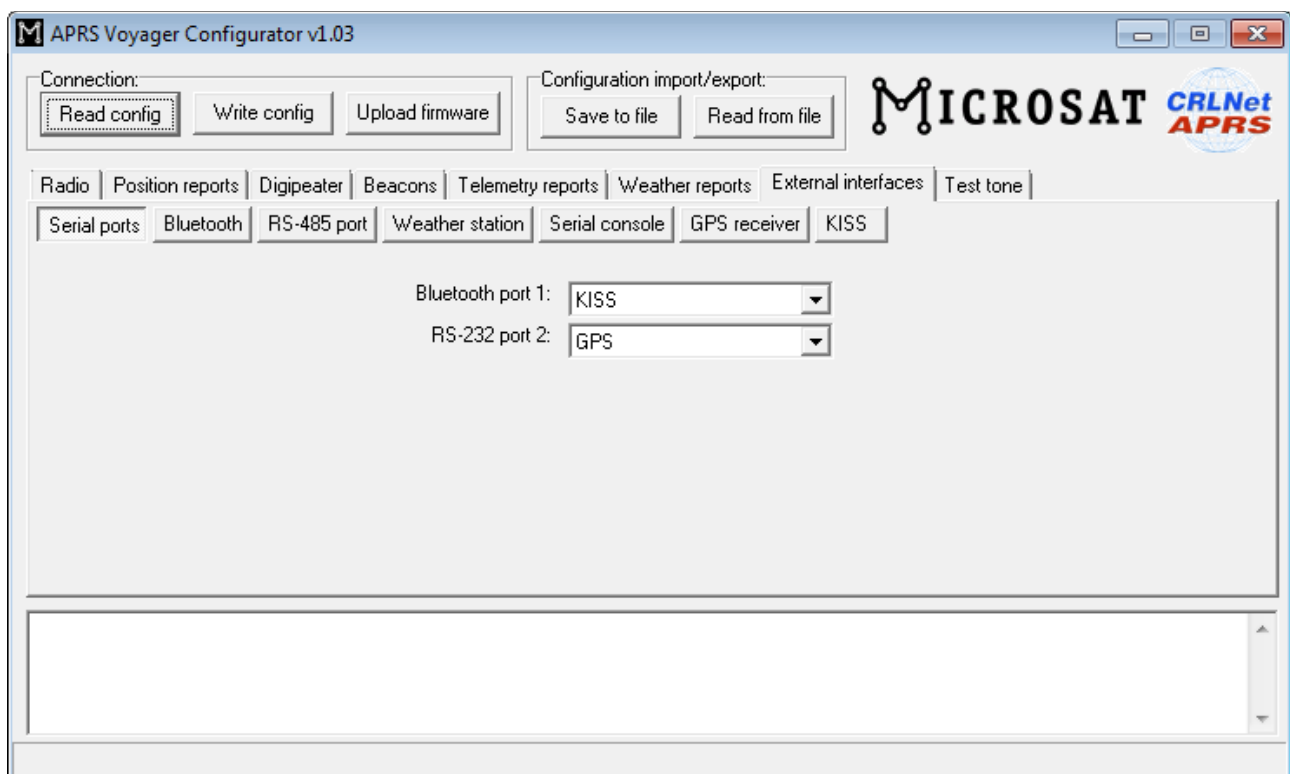


- **„Bluetooth port 1”** - selection of Bluetooth port function,
- **„RS-232 port 2”** - selection of RS-232 port function.

APRS Voyager incorporates only one RS-232 serial interface (contrary to PLXTracker or PLXDigi), located on „RS-232 port 2” pins (port 1 is internally occupied by Bluetooth interface).


If you wish to use a weather station, serial console, etc., you will need a different set of serial cables than for PLXTracker or PLXDigi.

8.11.2. External interfaces / Bluetooth

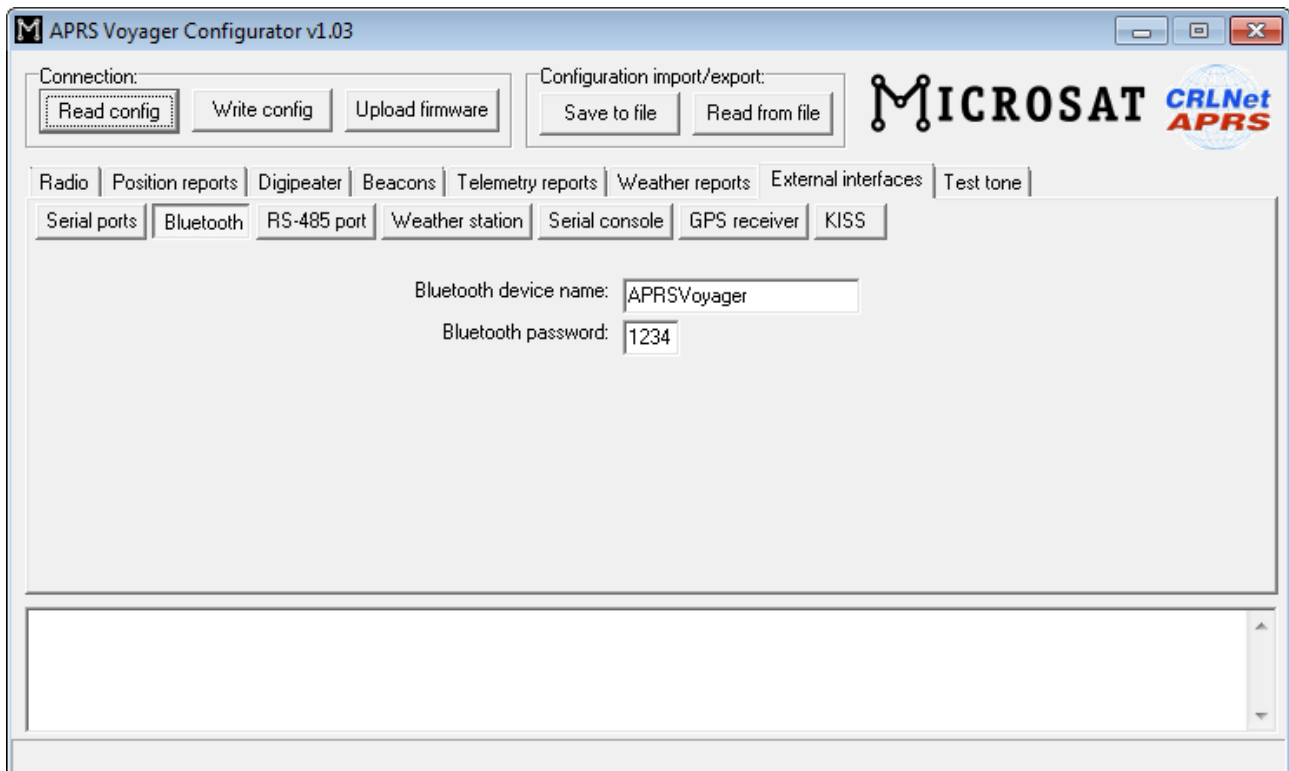


- „Bluetooth device name” - Bluetooth name which will be displayed on your laptop/smartphone/tablet when searching for nearby Bluetooth devices,
- „Bluetooth password” - Bluetooth password which needs to be entered while pairing with APRS Voyager Bluetooth interface.

8.11.3. External interfaces / RS-485 port

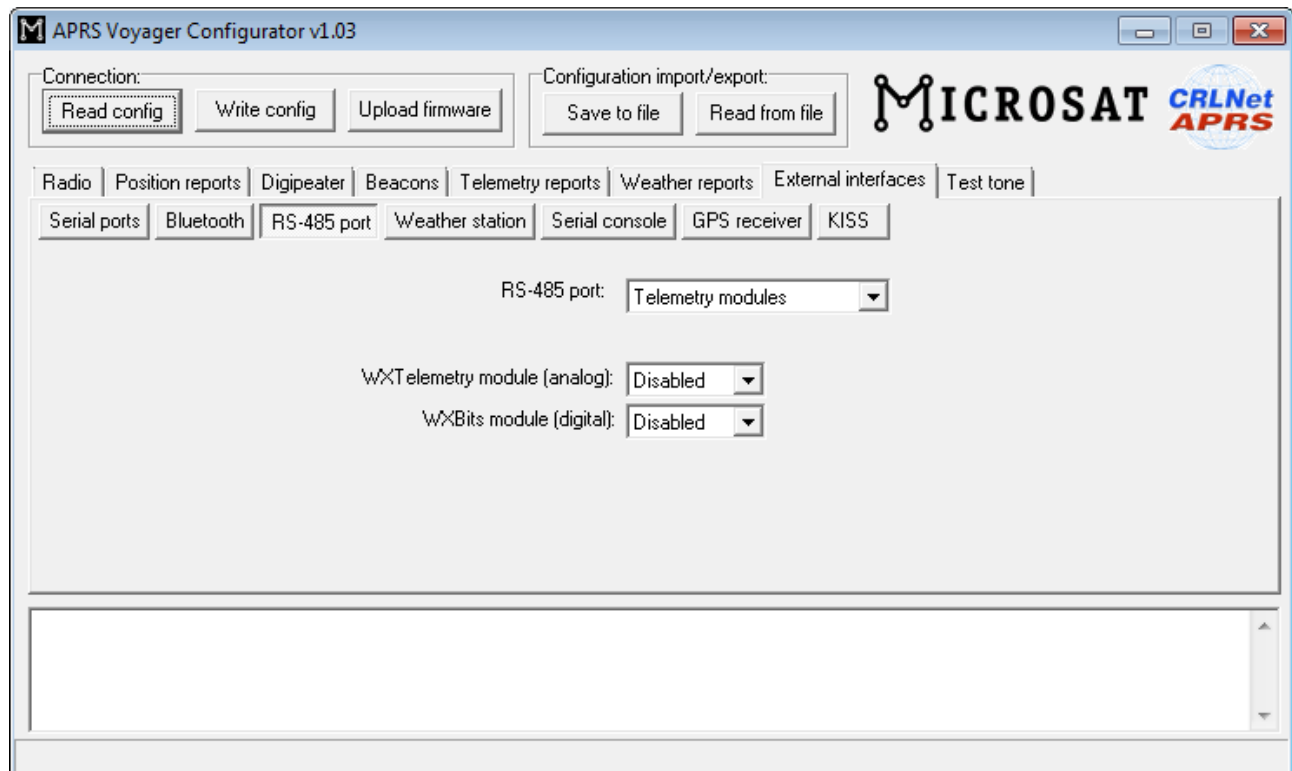


- „RS-485 port” - selects between telemetry modules or digital thermometer connected to RS-485 bus,
- “WXTelemetry module (analog)” - enables or disables WXTelemetry module support,
- “WXBits module (digital)” - enables or disables WXBits module support,

8.11.4. External interfaces / Weather station

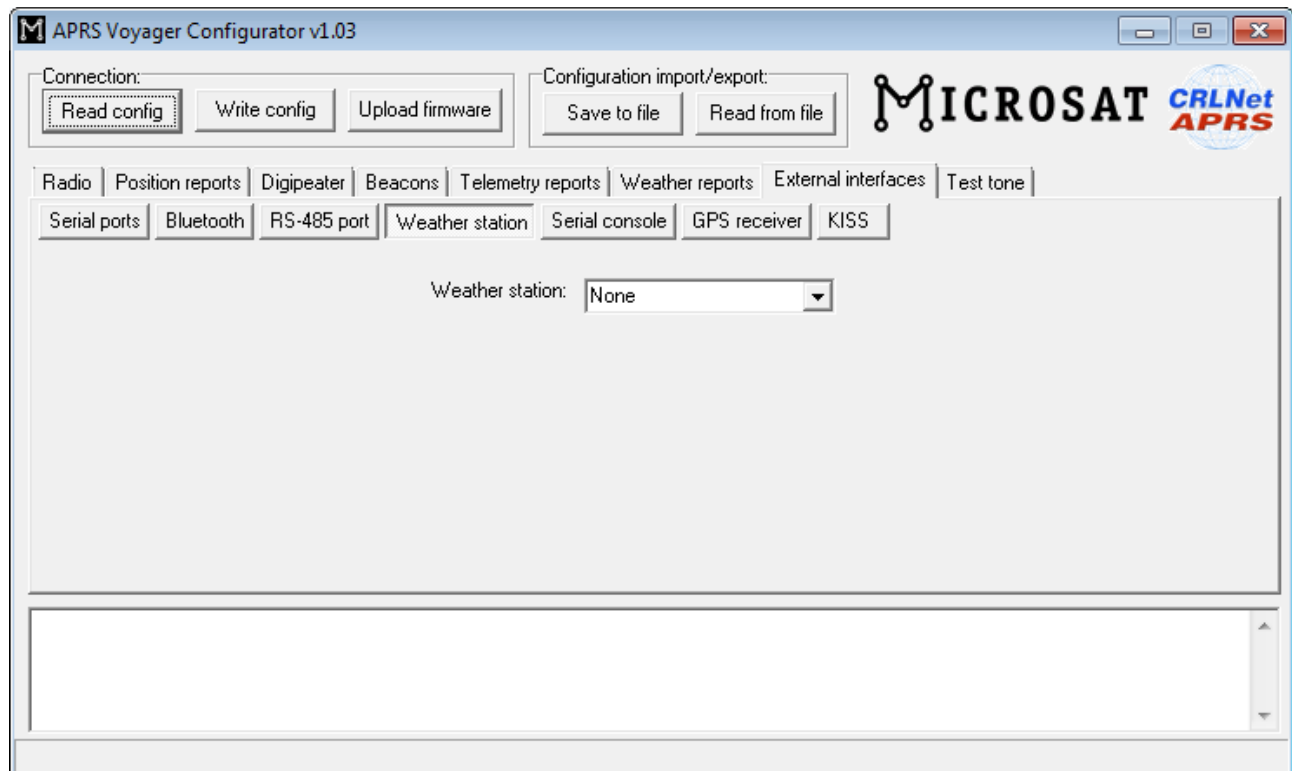


- **“Weather station”** - selection of weather station model connected to APRS Voyager serial port.

8.11.5. External interfaces / Serial console

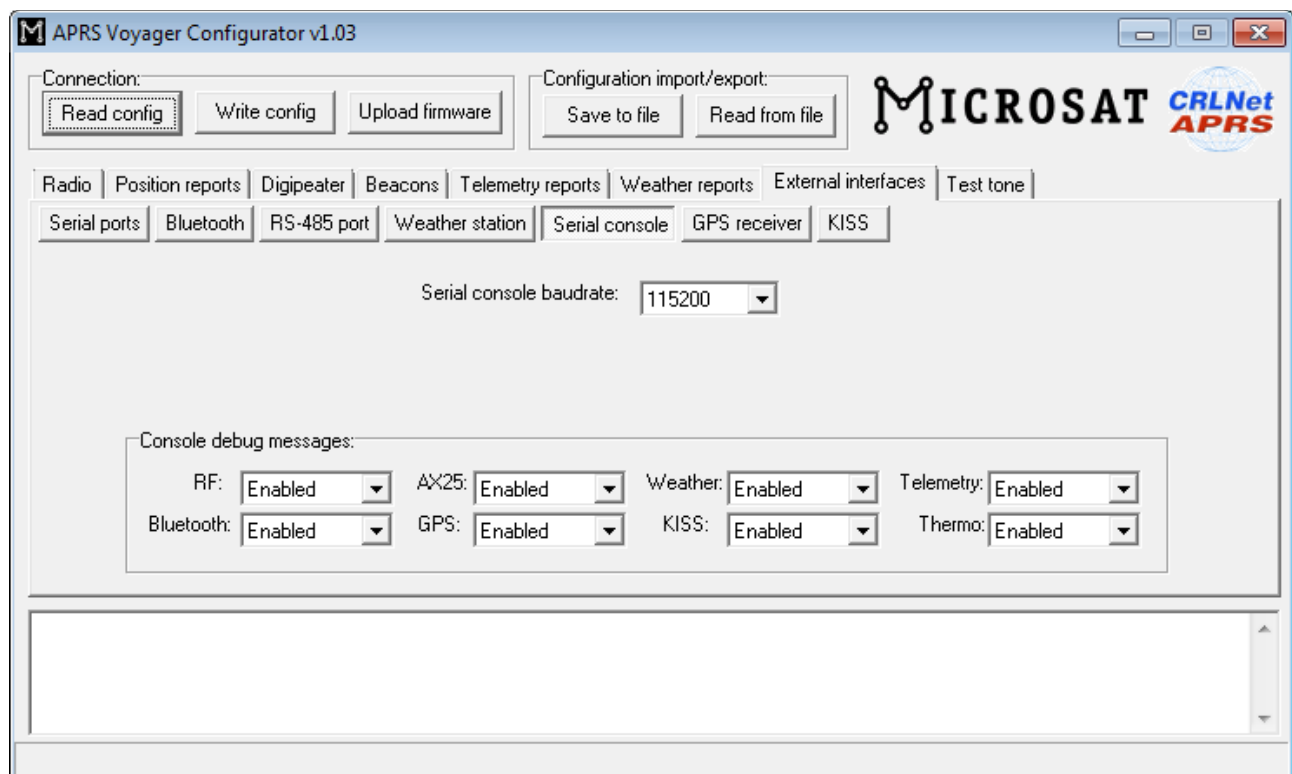


- „Serial console baudrate” - selection of serial console communication baudrate,
- „Console debug messages” - enables or disables various debug messages printed via serial console.

8.11.6. External interfaces / GPS receiver

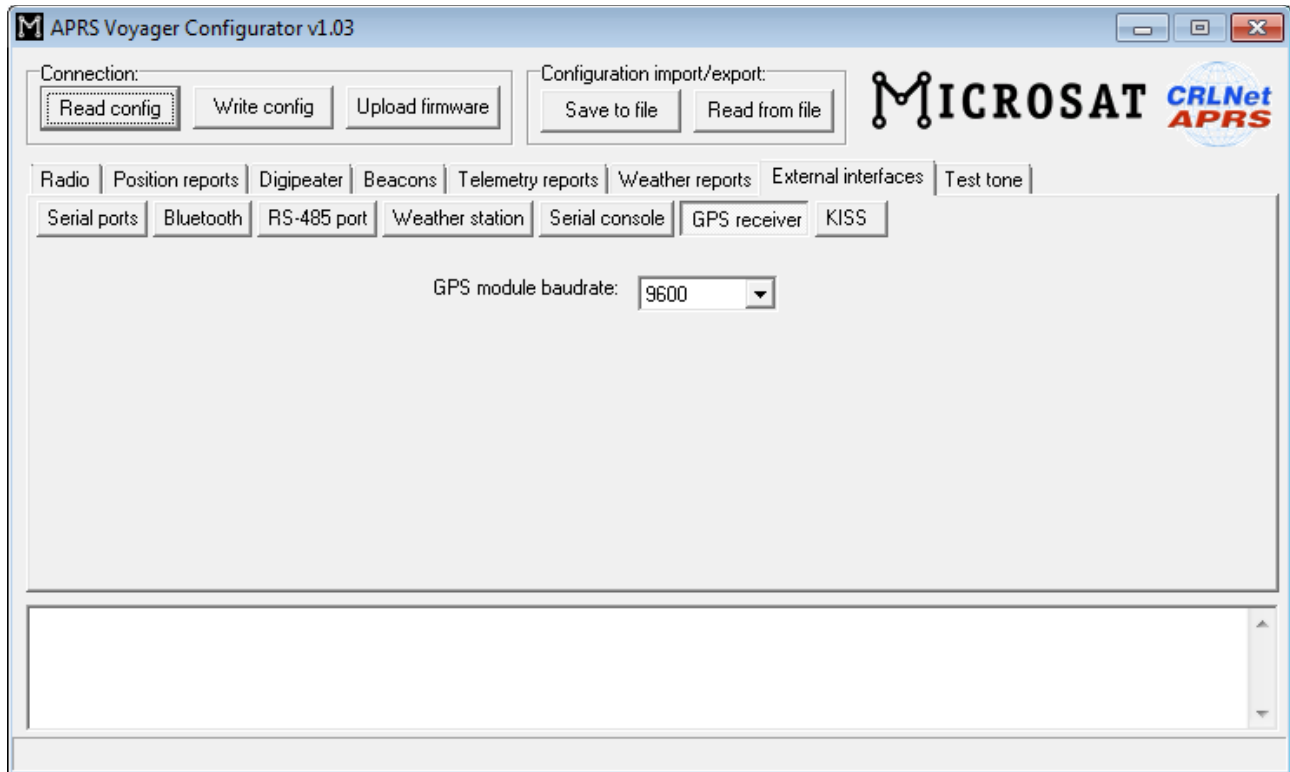


- “GPS module baudrate” - selection of GPS receiver communication baudrate.

8.11.7. External interfaces / KISS

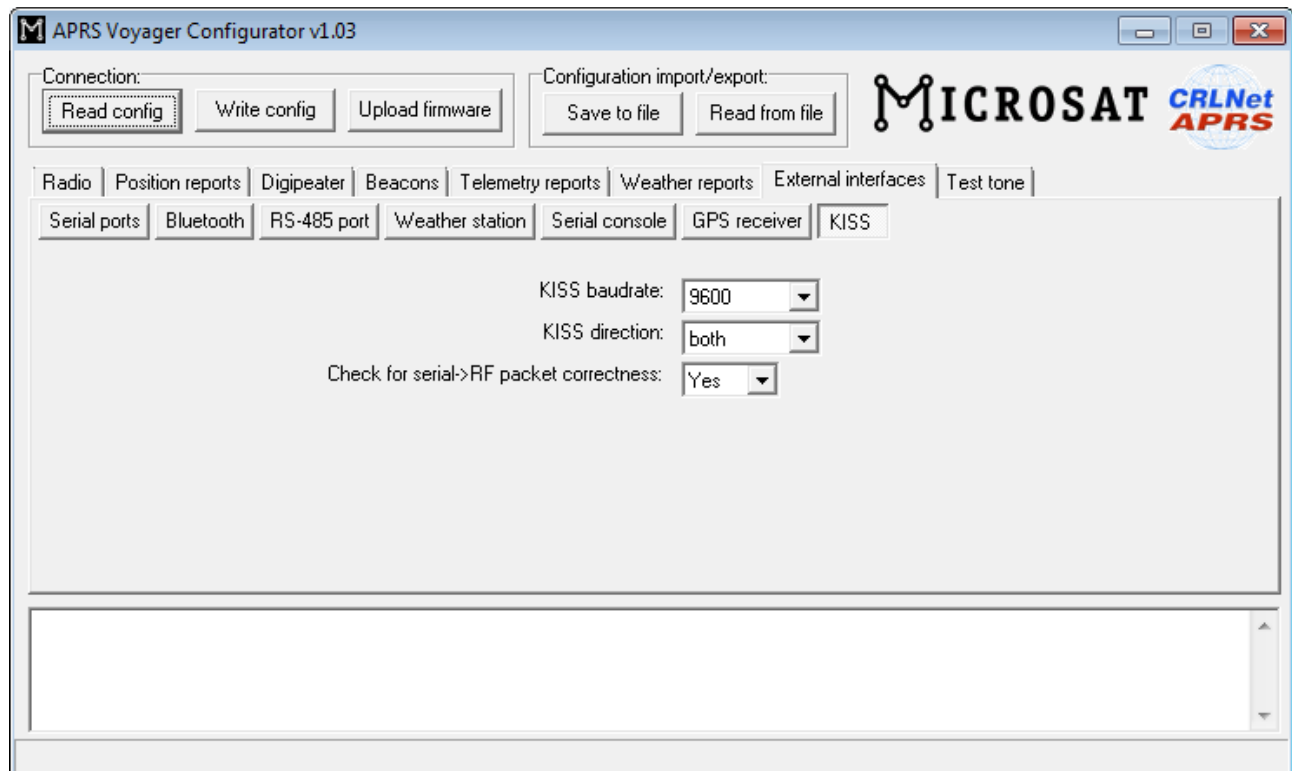

- **“KISS baudrate”** - KISS packet communication baudrate setting,
- **“KISS direction”** - selects KISS direction:
 - **“RF->serial”** - only output of packets received from RF,
 - **“both”** - output of packets received from RF and forwarding of packets from serial port to RF,
- **“Check for serial->RF packet correctness”** - if enabled, then it tries to prevent forwarding of corrupted or malformed packets from serial port to RF.

8.12. Test tone

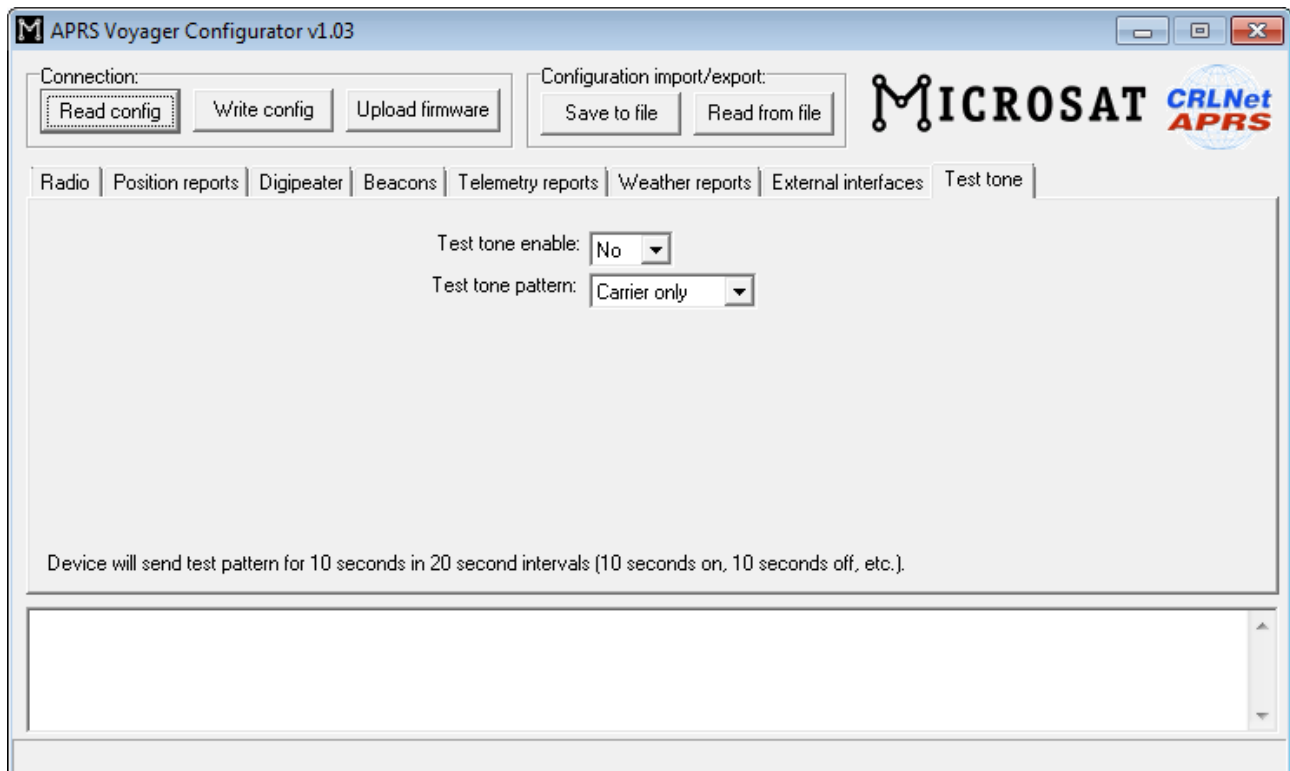


This Tab allows to enable test tone generation in APRS Voyager. When test tone is enabled, device will not send and receive any packets. Alternatively it will send a constant test pattern with 50% duty cycle in 20 seconds interval (10 seconds on, 10 seconds off).

- „**Test tone enable**” - enables or disables test tone generation,
- „**Test tone pattern**” - sends test tone according to selection: 1200 Hz tone, 2200Hz tone, 1200/2200Hz tones changing every bit (every 1/1200 seconds), or carrier only with no tones at all.


9. Bluetooth connection with APRSDroid

In this chapter I will show you how to pair APRS Voyager Bluetooth interface with APRSDroid application running on a smartphone. My testing platform is Samsung Galaxy Grand Neo GT-i9060 hosting Android Kitkat 4.4.4.


After running APRSDroid we need to get into application preferences. To do it we need to press on three dots in upper-right corner of the screen. On my phone the same result occurs after pressing for few seconds a button in lower-left corner of smartphone surface. A menu will open:

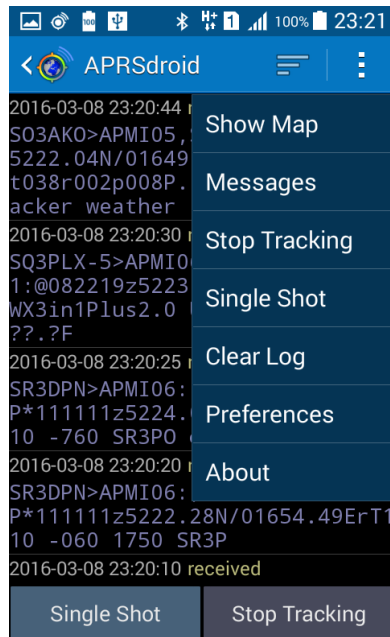


Next we need to press on „Preferences” to see something like this:

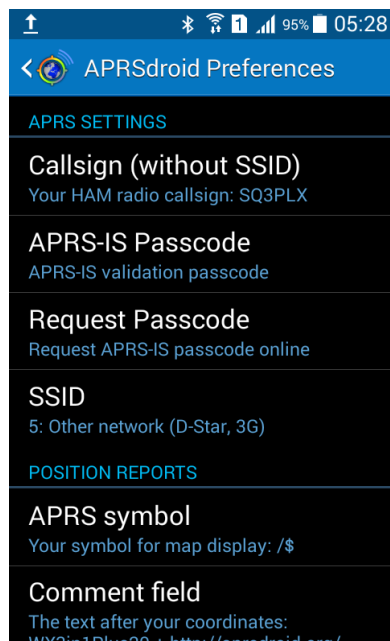


Here you can set your Callsign, SSID, APRS symbol and Comment field of your position beacons. Now scroll down to „Connection protocol” field and press it:

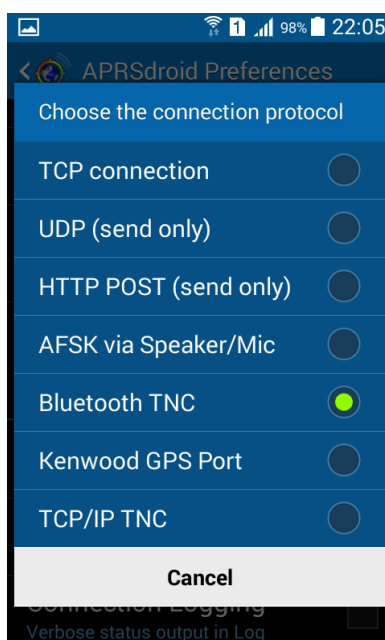


You need to select „Bluetooth TNC” option in „Connection protocol” setting. After making a selection you will get back to Preferences menu. Now click on „Bluetooth settings” option. Enable Bluetooth if necessary and you should see a list of available Bluetooth devices. With APRS Voyager you will see „APRSVoyager” name instead of „BT/MICROSAT_0003”.

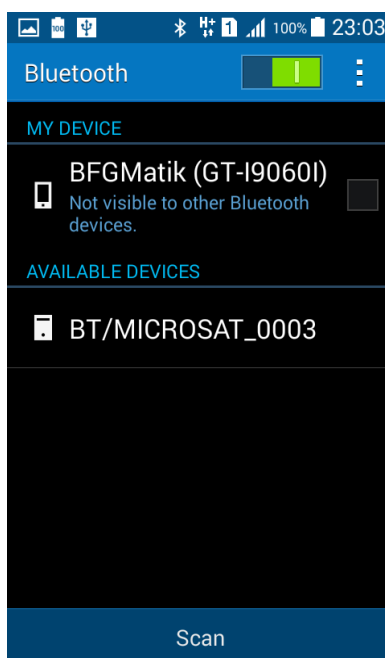


Now click on discovered device to pair with it. You will be asked for device's PIN (default: 1234 if you didn't change it in APRS Voyager configuration).

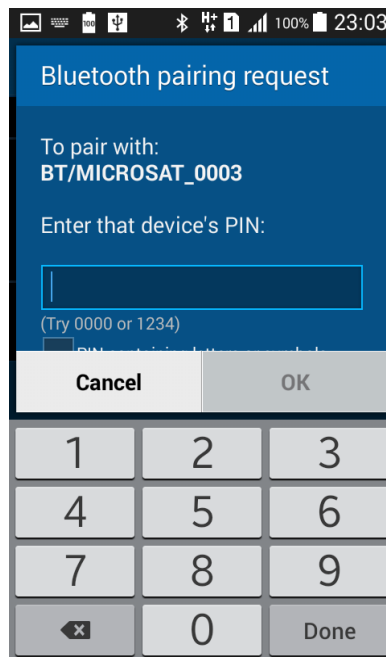


After successful pairing you should see the device as paired:

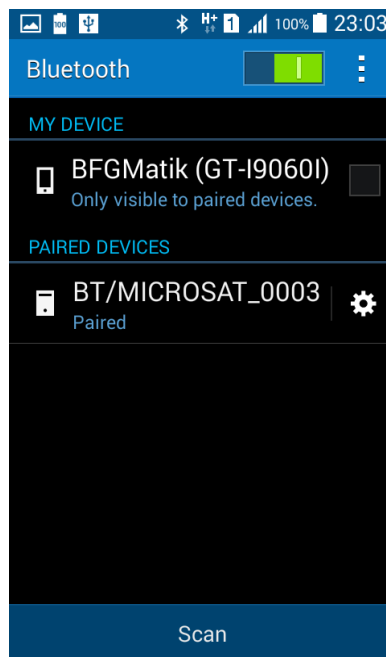


Now get back to Preferences, press on „Connection Preferences” and then on „TNC Bluetooth device” to select your paired device as preferred Bluetooth TNC (again you will see APRSVoyager instead of „BT/MICROSAT_0003”:

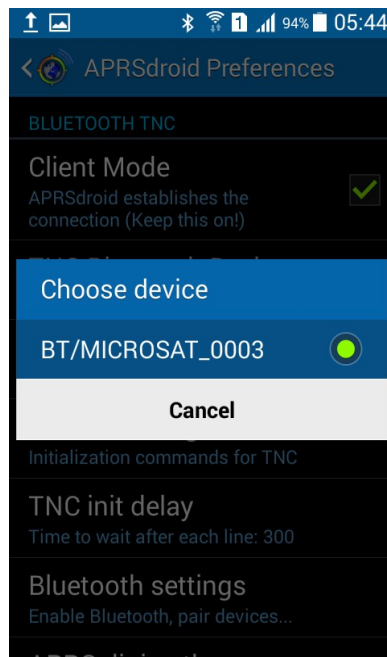


Now you can leave the menu and get back to the main window of APRSDroid application:

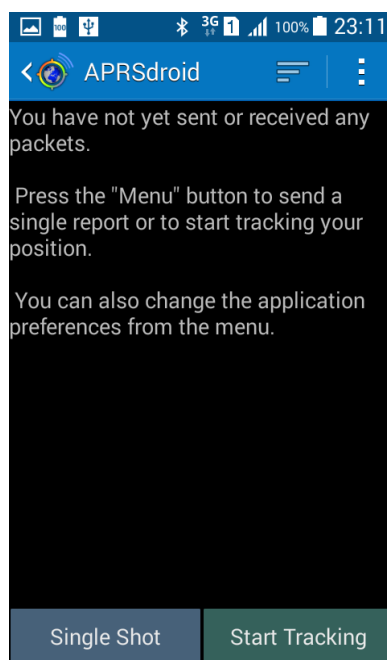

Press on „Start Tracking” and you should get a confirmation that connection was opened correctly. After some time you should start to see received packets:

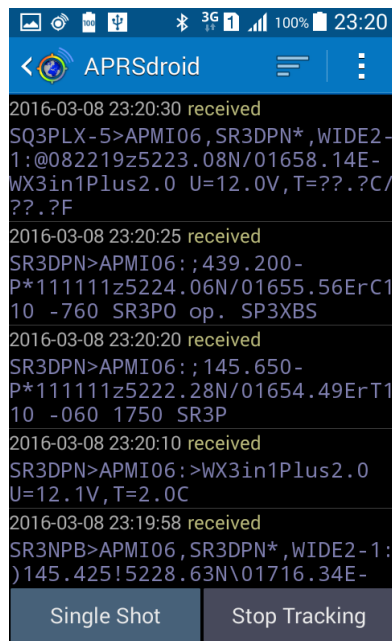

You can also open a map to see received stations plotted on Google Maps:

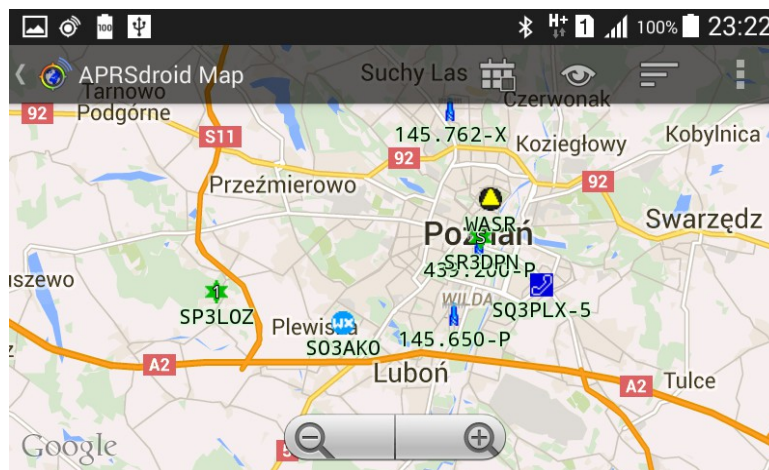

And that is all about connecting your APRS Voyager to APRSDroid. With APRSDroid you can also send and receive messages from other APRS users or use your smartphone's built-in GPS to make a SmartBeaconing tracker without additional external GPS receiver. Good luck in revealing other APRSDroid features.